

ADEMCO**5801****Remote Wireless Panic Transmitter****INSTALLATION INSTRUCTIONS****For use with QED control panels ONLY!****GENERAL**

The No. 5801 is a portable unit which can be programmed (at the control receiver) to perform up to four system functions (e.g., arm STAY, arm AWAY, Panic, disarm, etc.). No audible or visual system status indications are provided by the No. 5801 (except for a Red LED indicator which flashes when the unit transmits). The 5801 is intended for use only with wireless alarm systems that support QED 5800 series devices.

The transmitter may be left unmounted, resting on a table, countertop or other surface, or carried in a pocket or purse. If the unit will not be wall-mounted, remove the mounting plate attached to the back of the unit (see step 1 of *WALL-MOUNTING* instructions on the other side).

Ensure that a transmission is received from each area where usage of this transmitter is anticipated.

PROGRAMMING

The 5801 has four unique identification codes permanently assigned during manufacture. The control system is required to "enroll" these codes at some point prior to usage of the system. Each button which will be used must be enrolled by the control receiver.

IMPORTANT PROGRAMMING NOTE: THE 5801 TRANSMITTER MUST BE PROGRAMMED AS ONE OF THE FOLLOWING INPUT TYPES ONLY:

"UR" type (unsupervised RF)

"RF" type (supervised RF).

The **UR** type is supervised only for battery status, whereas the **RF** type is supervised for an hourly check-in signal *and must not be taken out of range of the control receiver*. See the QED control unit's Installation Instructions for further details regarding programming.

SELECTION OF FUNCTIONS FOR BUTTONS

For convenience, the 5801 is supplied with the buttons labeled with the functions shown in Figure 1. Labels for these particular functions were chosen since they are those likely to be selected for most installations. However, additional labels are provided for those cases where other functions are desired; simply attach the new label over the existing one. *In all cases, each button must be programmed for its desired function, as indicated in the control unit's installation instructions.*

IMPORTANT NOTE:

If the "Function 4" button is not used, it **MUST** be programmed as a "Not used" zone type.

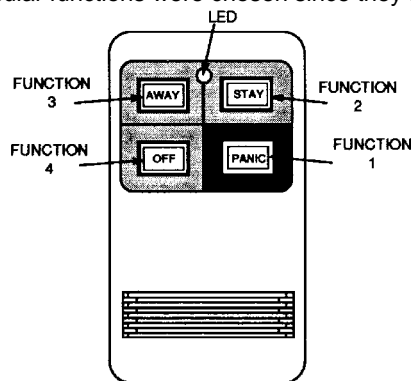


Figure 1. No. 5801 transmitter

BATTERY INSTALLATION

1. Remove the cover by inserting the blade of a small screwdriver into the slot at the bottom of the case and twisting.
2. Install the Lithium battery supplied in the battery compartment, **observing correct polarity** (see Fig. 2). Make sure the battery is firmly seated.
3. Replace the cover (snap fit).

BATTERY CAUTION:

Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 100°C, or incinerate. Dispose of used batteries promptly. Keep away from children.

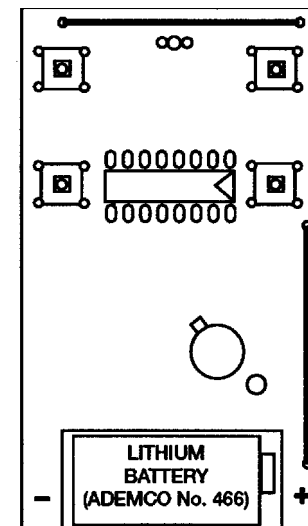


Figure 2. No. 5801, Cover Removed

WALL-MOUNTING (OPTIONAL)

To wall-mount the unit, proceed as follows:

1. Disengage the supplied wall mounting plate from the unit by sliding it along the case back.
2. Attach the mounting bracket in the desired location **with the hooks pointing upward**, using the 2 screws supplied. The word TOP is molded along the upper edge of the plate.
3. Locate the keyhole slots on the back of the transmitter case onto the bracket's hooks, and secure by sliding the case downward firmly.

SPECIFICATIONS

Size: 4" x 2-1/4" x 13/16"
102mm x 57mm x 21mm.

LED: Flashes when unit transmits.

Battery: 3-volt Lithium. Use only Ademco No. 466, Duracell DL123A, Panasonic CR123A, Sanyo CR123A, or Varta CR123A.

REFER TO THE INSTALLATION INSTRUCTIONS FOR THE QED RECEIVER/CONTROL WITH WHICH THIS DEVICE IS USED FOR WARRANTY INFORMATION, AND FOR DETAILS REGARDING THE LIMITATIONS OF THE ENTIRE ALARM SYSTEM.

**ADEMCO
GROUP**

165 Eileen Way, Syosset, New York 11791
Copyright © 1998 Pittway Corporation

