



TECHNICAL LIBRARY

by: Dean Schuetz on 11/12/96 12:55 PM

Title: Description of errors in Format Report.

Volume: N-1000

Category: Reports

B O D Y

In Terminal, the command

_F=pn_R

produces a format report, as shown below:

RD#01

ERRORS = 00000 00000 00000 00000 00000 00000 00000 00000 00000
00000 00000 00013 00000 00000 00000 00000 00000 00000 00000 00000 00000
01 CARD BITS = 26 STR BITS = 01 STP BITS = 01 B1 B2 B3 B4
02 CARD BITS = 32 STR BITS = 00 STP BITS = 00 B1 B2 B3 B4
03 CARD BITS = 34 STR BITS = 01 STP BITS = 01 B1 B2 B3 B4
04 05 06 07 08 12-30 TH 12:01

The report shows two lines of error codes. The first line has 9 5-digit codes, and the second line has 13 5-digit codes. These are the current descriptions of the codes:

LINE 1

Group Description

- 1 Number of times panel has been reset
- 2 Amount of noise received**
- 3 Invalid format cards
- 4 Card presented with valid format
- 5 Card presented with valid Site code
- 6 Card presented that is in data base
- 7 Card presented and valid to open door
- 8 Card presented that opened door
- 9 Not currently used

LINE 2

Group Description

- 1 Special receive condition (Bad Communication)
- 2 Disregarded characters
- 3 Commands received
- 4 Start of Message Received
- 5 Complete Messages Received
- 6 Point changes of state (Future)
- 7 Transmitted changes of state (Future)
- 8 Transmitter under run (Not possible)
- 9 Receiver communication failure
- 10 Card decoder over flow
- 11 Not currently used
- 12 Not currently used
- 13 Not currently used

**Group 2 on the first line should follow this general rule: Do 2 reports an hour apart. If the noise reading has increased by less than 10, the noise is acceptable.

ATTACHMENTS