

QUICK-REFERENCE GUIDE

ARMING YOUR SYSTEM WHEN LEAVING

1. Check the Command Center keypad. The green STATUS light must be on in order to arm.

2. If the green light is off, faulted zones will display in the window. Note each problem zone and secure it by closing a window, door, etc. When all zones are secure, the green STATUS light will come on and the window will display "SYSTEM READY".

3. If you cannot locate or repair the problem yourself, call for assistance. If you cannot get immediate help, press the zone number then [BYPASS] to bypass the problem zone from the system. **Note:** Bypassing zones leaves those zones unprotected.

4. To arm, enter your code and press the [ON/OFF] Button. The green STATUS light will go off, the red ARMED light will come on and the window will display "EXIT TIME XX / PLEASE LEAVE NOW" (where "xx" represents the exit time remaining).

5. Leave through the exit door before exit time expires.

Note: If armed with zones bypassed, be sure to have the system checked as soon as possible.

ARMING YOUR SYSTEM WHILE ON THE PREMISES

Interior Zones

One or two groups of zones may have been designed as Interior Zones. Interior Zones, when bypassed, allow free movement within the premises while the protection of armed perimeter zones is maintained.

1. Select the interior group by repeatedly pressing the [INTERIOR] Button. The window will display "I1", "I2", or "I1+ I2" with

its related description.

2. When the desired interior group is displayed, press the [ON/OFF] Button to select it. "BYPASS" will display to indicate zones bypassed.

3. Enter your code, then press the [ON/OFF] Button. The ARMED light will come on. After the exit time has elapsed, the window will display "SYSTEM ARMED".

Instant Protection

1. To cancel the entry delay while on the premises, press the [INSTANT] Button either before or after arming. (Exit delay will remain in effect upon arming.)

2. When armed, the window will display "SYSTEM ARMED I" and the red ARMED light will flicker to indicate instant protection.

3. After exit delay has expired, opening the entry door will cause an instant alarm.

EMERGENCY BUTTONS *(Only available if programmed)*

The blue Emergency Buttons are always active, whether the system is armed or disarmed. The emergency signal will only be activated when *both* buttons are pressed at the same time.

- ☐ **Police Emergency.** Simultaneously press the blue [P] and [*] Buttons to alert the central station of a police emergency.
- ☐ **Fire Emergency.** Simultaneously press the blue [F] and [*] Buttons to alert the central station of a fire emergency.
- ☐ **Auxiliary Emergency.** Simultaneously press the blue [A] and [*] Buttons to alert the central station of some other emergency.

DISARMING WHEN RETURNING

1. Upon entry, the Command-Center sounder will come on as a reminder to disarm the panel; the red ALARM light will be on.

2. Immediately enter your code, then press the [ON/OFF] Button. The sounder will silence, the red ARMED light will go out.

3. If the red ALARM light is flashing and "ALARM" is displayed, an alarm occurred while you were out. *Proceed with caution!* If you suspect that an intruder may still be on the premises, leave immediately and call authorities from a neighbor's phone.

4. To silence an audible alarm, enter your code and press the [ON/OFF] Button. After the system is disarmed, the window will continue to display "ALARM" followed by the zone(s) violated.

5. To reset the display, note the zones violated, then press the [RESET] Button.

Ambush

The Ambush Code (optional) is a 2-digit code that is entered just prior to your Disarm Code. If an intruder forces you to disarm your system, (a) enter your Ambush Code; (b) enter your Disarm Code; and (c) press the [ON/OFF] Button.

Example: If your regular Arm/Disarm Code is 1234 and your Ambush Code is 99, press [9] [9] [1] [2] [3] [4] [ON/OFF]. This will send a silent alarm to the central station.

The red ARMED light will go out and the window will display "SYSTEM READY", as if the system were merely disarmed. There will be no indication that an alarm has been sent.

TEST YOUR SYSTEM WEEKLY!

1. Press [FUNCTION] Button. "DISPLAY STATUS" will display in window.
2. Press [FUNCTION] Button repeatedly until [BELL TEST] displays.
3. Press [ON/OFF] (while disarmed) to execute test. The alarm will sound for about 2 seconds. If the alarm does not sound, call for service.

FIRE PROTECTION (*Applicable only where local ordinance permits use of this alarm control panel for fire protection.*)

Fire-Zone Alarm

If a fire is detected, "FIRE ALARM" will be displayed and the Command-Center sounder will pulse.

1. If a fire is in progress, *evacuate the premises immediately!* If necessary, call the Fire Department from an outside phone.

2. If there is no evidence of a fire, enter your code and press [ON/OFF] to turn off the alarm.

3. Press the [RESET] Button to silence the Command-Center sounder.

4. After the alarm condition is corrected (thermostat cooled down; smoke cleared from detector; etc.), pressing [RESET] again will reset the Command Center within about 10 seconds.

Fire-Zone Trouble

1. If a problem in the fire-circuit is detected, "FIRE TROUBLE" will display and the sounder will pulse to signal a malfunction.

2. Press the [RESET] Button to silence the sounder. *Call for service immediately!*

REMEMBER: TO SHUT OFF AN ALARM,
ENTER YOUR CODE, THEN PRESS THE [ON/OFF] BUTTON.

FOR SERVICE, CALL: _____

CENTRAL STATION: _____

ACCOUNT NO. _____