



R A D I O N I C S

Easikey User's Guide

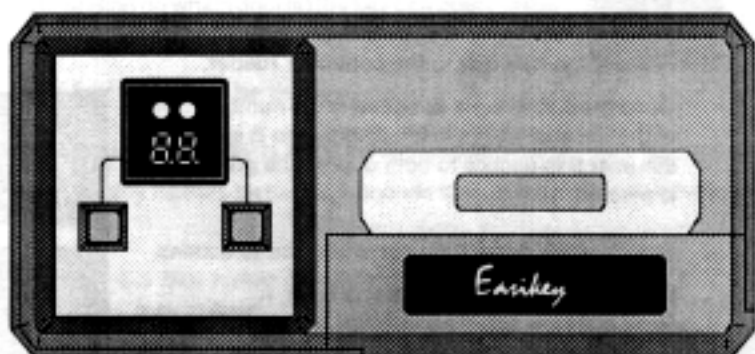

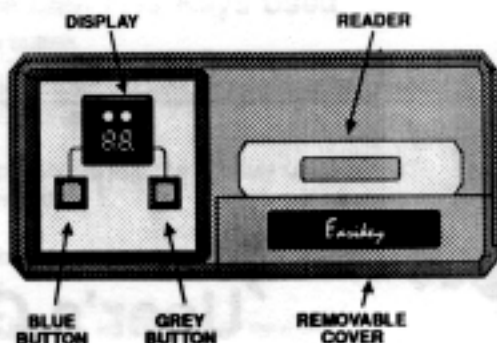

Introduction

Read the following instructions before adding or deleting keys. If no activity occurs for 15 seconds in between steps, the controller times out and you must start again from the beginning. To exit the function or end the session before 15 seconds, the master key can be presented.

Adding Keys

1. Present the new key to the controller reader.

Once read, the key is assigned an ID number. Both of the decimal points in the display are lit indicating the user has access to both doors. The green LED is also on.



2. Select which doors the user is allowed to access.

Blue button = selects/deselects Door 1.

Grey button = selects/deselects access to Door 2.

To select both doors, leave both decimal points on.


In this example, the user with key ID 9 has access to Door 1.




3. Present a master key to the controller reader to confirm the added key.

The ID number clears leaving the decimal point(s) and the green LED on for 15 seconds.

To add additional keys repeat steps 1-3. The ID number increases with each key added.

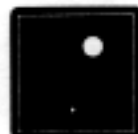

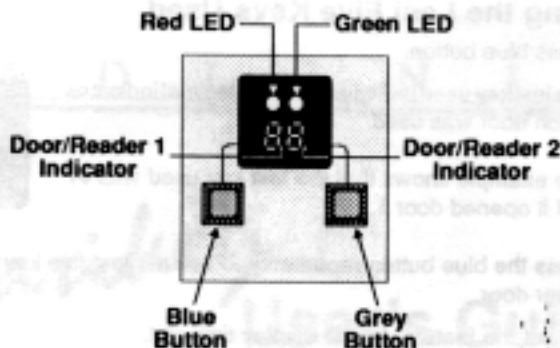

Deleting Keys

When You Have the Key

1. Present the existing key to the controller reader.

The key ID number is displayed. The red LED comes on, and one or both of the decimals light depending on which door(s) the key can open. In the example, the key, ID 7, can open door 1.



The key is ready to be deleted.

2. Present a master key to the controller reader.

The display flashes for two (2) seconds then clears. The key is now deleted.

When You Do Not Have the Key

1. Press the grey button.

The following display appears:



2. Press the blue button (tens) and grey button (single digits) to select the key ID number you want to delete.

When the key ID number is entered, one or both of the decimals light depending on which door(s) the key can open. In the example, the key is ID 7 and it can open door 1.



The key is ready to be deleted.

3. Present a master key to the controller reader.

The display flashes for two (2) seconds then clears. The key is now deleted.

Viewing the Last Five Keys Used

1. Press blue button.

The last key used is displayed. The decimal indicates which door was used.

The example shows that the last key used was #7 and it opened door 1.



2. Press the blue button repeatedly to see the last five keys used on either door.

To exit the feature, let the display time out.

71-05986-000-B 1/93



Radionics™

Radionics, Inc. 1800 Abbott Street
Salinas, CA 93901 U.S.A.